



Mobile Print/Scan Guide for Brother iPrint&Scan (Android™)



Before You Use Your Brother Machine

Definitions of Notes

We use the following symbol and convention throughout this User's Guide:



Tips icons indicate helpful hints and supplementary information.

Trademarks

Wi-Fi and Wi-Fi Direct are registered trademarks of Wi-Fi Alliance®.

The Bluetooth word mark is owned by the Bluetooth SIG, Inc. and any use of such marks by Brother Industries, Ltd. is under license.

Google, Android, Gmail, Google Play and Google Cloud Print are trademarks of Google Inc. Use of these trademarks is subject to Google Permissions.

Any trade names and product names of companies appearing on Brother products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.

Table of Contents

1	Introduction	1
	Download Brother iPrint&Scan Using the Google Play™ Store App	1
	Device Connections.....	1
	Use the NFC Function	2
	Set a Device	3
	Edit an Image	3
	Icons	4
2	Print	5
	Print Photos Stored on Your Mobile Device	5
	Print Documents	5
	Print Using Cloud Services	6
	Print Web Pages.....	6
	Clear Your Browsing History	6
	Print Email Messages.....	7
	Print from Other Applications.....	7
	Print Photos or Documents	7
	Print Web Pages	7
3	Scan.....	8
	Scan Directly to Your Mobile Device's Memory Card	8
	Open Scanned Images in Other Applications.....	8
4	Copy	9
	Copy Preview	9
5	Fax	10
	Send a Fax	10
	Receive a Fax.....	10

Download Brother iPrint&Scan Using the Google Play™ Store App

Brother iPrint&Scan allows you to use features of your Brother machine directly from your Android™ device.

You can install Brother iPrint&Scan from the Google Play™ Store app. For best results, make sure you are using the latest version.

Device Connections

Connect your mobile device to your Brother machine using one of the following connection methods:

Wi-Fi®

To configure your Brother machine for a Wi-Fi connection, see your machine's *Quick Setup Guide*.

Wi-Fi Direct®

To configure your Brother machine for a Wi-Fi Direct network, download any of the following guides from your model's **Manuals** page on the Brother Solutions Center at <http://support.brother.com>.

- *Wi-Fi Direct Guide*
- *Software and Network User's Guide*
- *Online User's Guide*

Your Brother machine must support Wi-Fi Direct.

Bluetooth

To configure your Brother machine for a Bluetooth connection, see your Brother machine's *User's Guide*.

NFC (Near Field Communication)

If you use NFC, you can print and scan by holding your mobile device against the NFC logo on your Brother machine. A network connection is not necessary.

Remote Print (Google Cloud Print™)


To configure your Brother machine for printing using Google Cloud Print, download the *Google Cloud Print Guide* from your model's **Manuals** page on the Brother Solutions Center at

<http://support.brother.com>. Your Brother machine must support Google Cloud Print.




Depending on your Brother machine and mobile device, supported connection methods may vary.

Use the NFC Function

- 1 Tap a model name or **No Device Selected**.
- 2 Tap .
- 3 Tap **Use NFC**.
- 4 Display the Print Preview or the scan screen on your mobile device.
- 5 Hold your mobile device against the NFC logo on your Brother machine.



- Your mobile device must support NFC.
- Make sure you turn on the NFC function on your mobile device and your Brother machine. You can confirm your machine's NFC setting in the Network menu on the machine's control panel.
- If your mobile device is not recognized, reposition your mobile device over the NFC logo and try again.
- The screen and the message displayed may vary depending on your mobile device.
- If **Touch to beam** appears, tap the center of the screen.

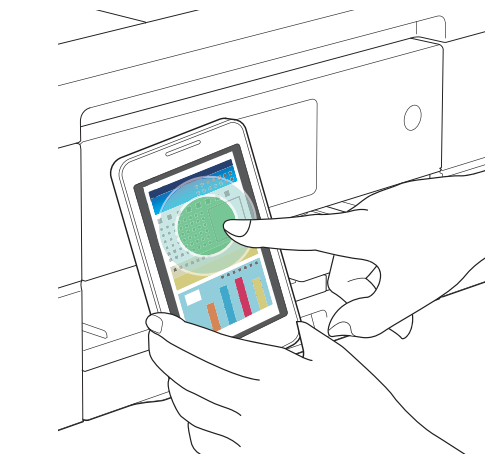

Set a Device

If a different machine is selected or if **No Device Selected** is displayed:

1 Tap a model name or **No Device Selected**.

2 Select a device.



If your machine is not in the list, you may be able to find it by tapping **Set Manually**, and then entering its IP address.

Edit an Image





Edit

Tap .



Scale

- Tap . Move  to reduce or enlarge the image.
- Tap and drag the image to reposition it.










Adjust rotation and angle

- Tap  to adjust rotation and angle.
- Tap  to rotate 90 degrees clockwise.
- Drag  left or right to adjust angle.
()




Crop

- Tap . Move  to set the cropped area.
- Tap and drag the cropped area to move it.

Icons



Icon	Usage	
	Settings	
	Display menu	
	Select all pages	
		Deselect all pages
		Enlarge thumbnail
		Reduce thumbnail
	Thumbnail list	
	Grid list	
	Tree list	

Print Photos Stored on Your Mobile Device


- 1 Tap .
 - 2 Tap **Photo**.
 - 3 Tap the file you want to print.
 - 4 Tap **Done**.
 - 5 Tap **Print**.
-
- Tap  to change **Print Settings**.
 - Tap  to edit the image.
-

Print Documents



Print documents saved on your mobile device's memory card.

- 1 Tap .
 - 2 Tap **Documents**.
 - 3 Tap the file you want to print.
 - 4 Tap **Print**.
-
- Files with the following security settings cannot be printed:
 - **Security Method: Password Security**
 - **Encryption Level: [256-bit AES] PDF file**
 - **Printing Allowed: None or Low Resolution (150dpi)**
 - Tap  to change **Print Settings**.
-

Print Using Cloud Services


- 1 Tap .
- 2 Tap **Cloud Services**.
- 3 Select the service you want to use.
- 4 Sign in.
- 5 Tap the file or note you want to print.
- 6 Tap **Print**.




- Tap  to change **Print Settings**.
- Tap  to edit the image.

Print Web Pages


Print web pages using the web browser included in Brother iPrint&Scan.

- 1 Tap .
- 2 Tap **Web Page**.
- 3 Navigate to the web page you want to print.
- 4 Tap **Print Preview**.
- 5 Tap **Print**.




Tap  to change **Print Settings**.

Clear Your Browsing History




- 1 Tap .
- 2 Tap **History**.
- 3 To delete a record from your browsing history:
 - Touch the record and hold it until the pop-up screen appears.
Tap **OK**.To delete your entire browsing history:
 - Tap **Menu**, and then tap **Clear History**.
Tap **OK**.

Print Email Messages

Use Brother iPrint&Scan to view and print email messages from your Gmail™ account (Google Account).

- 1 Tap .
- 2 Tap **Email**.
- 3 Select the email message you want to print.
- 4 Tap **Print Preview**.
- 5 Tap **Print**.



-
- Tap  to display other messages.
 - Tap  at the home screen to change **Account Settings**.
 - Tap  to change **Print Settings**.
-

Print from Other Applications

You can also print photos, documents and web pages by sharing them with Brother iPrint&Scan.


Print Photos or Documents

- 1 Select the file you want to print.
- 2 Share the file by selecting Brother iPrint&Scan from the list of applications.
- 3 Tap **Print**.


Print Web Pages

- 1 Navigate to the web page you want to print.
- 2 Share the page by pressing the **Menu** button and selecting **Share page**.
When the list of applications appears, select Brother iPrint&Scan.
- 3 Tap **Print Preview**.
- 4 Tap **Print**.



Scan Directly to Your Mobile Device's Memory Card

- 1 Load the document to scan in your Brother machine.
- 2 Tap .
- 3 Tap **Scan**.
- 4 Tap **Done** or **Scan**.
- 5 Tap **Save**.
- 6 Select the file format (JPEG or PDF).



-
- If you select JPEG, each page is saved as a separate file.
If you select PDF, all pages are saved in one file.
 - Scanned images are saved in the following folder on the memory card:
/sdcard/Brother/scan.
 - Tap  to edit the image.
-

Open Scanned Images in Other Applications

- 1 Load the document to scan in your Brother machine.
- 2 Tap .
- 3 Tap **Scan**.
- 4 Tap **Done** or **Scan**.
- 5 Tap .
- 6 Select the file format (JPEG or PDF).
- 7 Tap the desired application.



Tap  to edit the image.

Copy Preview



1 Tap .

2 Tap **Start**.



3 Tap **Done** or **Scan**.



4 Tap **Copy**.




-
- Tap  to change **Copy Settings**.
 - Tap  to edit the image.
-





Send a Fax

- 1 Tap .
- 2 Tap **Fax Send**.
- 3 Tap  to select a fax number from your address book or tap **Enter Number** to enter the number manually.
- 4 Tap **Fax documents from your machine** or **Select a file from this mobile device**.
- 5 Tap **Scan** or select the file from your mobile device.
- 6 Tap **Fax**.

 - Tap  to change **Fax Settings**.
 - Tap  to edit the image.

Receive a Fax

- 1 Tap .
- 2 Tap **Fax Preview**.
- 3 Tap the file you want to receive.

 - The **Fax Preview** settings must be **on** in your Brother machine.
 - Tap  to save the file. Received faxes are saved in the following folder on the memory card:
/sdcard/Brother/fax.
 - Tap  to share the file.
 - Tap  to print the file.
 - Tap  to change **Print Settings**.

brother

Visit us on the World Wide Web
<http://www.brother.com>



ENG
Version A